InLine® patch cable coupling Cat.6A, waterproof IP68, 2x RJ45 socket, shielded

INSTALLATION GUIDE

- Cat.6A coupling, shielded
- IP68 Outdoor
- Contact resistance < 10 mΩ
- Temperature range: -40 °C to 105 °C
- Usual RJ45 patch cables can be used
- 1:1 connection
- Protection class IP68
- Housing: UV-resistant
- Flame retardant to UL94 V-2
- Suitable for patch cables with 4.5 - 7.5 mm cable diamater
- Suitable for up to 10 Gb/s

1. Disassemble the adapter into its parts:

2. Insert the cable in the order shown and connect the plug to the coupling:

3. Insert the sealing ring for the coupling end so that the claws completely enclose the seal when the screw is tightened.

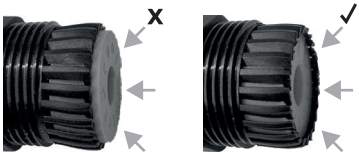

Note: Due to the design, it may happen that the snap-in protection of the patch cables has to be shortened somewhat, so that the RJ45 plug fits through the cap opening.



4. Screw the cap and then the safety screw connection until the seals are positively locked and thus provide the IP68 protection.

5. Repeat points 2 and 3 for the 2nd side of the clutch. The coupling is now ready for use.

service@inline-info.com
22 PAP
INTOS ELECTRONIC AG
SIEMENSSTRASSE 11
D-35394 GIESSEN

InLine® Patchkabel-Kupplung Cat.6A, wasserdicht IP68, 2x RJ45 Buchse, geschirmt

INSTALLATIONSANLEITUNG

- Cat.6A Kupplung, geschirmt
- IP68 Outdoor
- Kontaktwiderstand < 10 mΩ
- Temperaturbereich: -40 °C bis 105 °C
- Übliche RJ45 Patchkabel können verwendet werden
- 1:1 Verbindung
- Schutzklasse: IP68
- Gehäuse: UV-beständig
- Flammhemmend nach UL94 V-2
- Geeignet für Patchkabel mit 4,5 - 7,5 mm Kabeldurchmesser
- Bis 10 Gb/s geeignet

1. Zerlegen Sie den Adapter in seine Einzelteile:

2. Führen Sie das Kabel in der abgebildeten Reihenfolge ein und verbinden die den Stecker mit der Kupplung:

3. Setzen Sie den Dichtungsring für das Kupplungsende so ein, dass die Krallen beim Verschrauben die Dichtung vollständig umschließen.

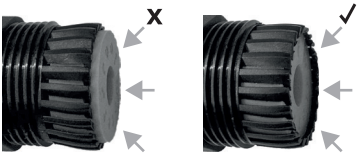

Hinweis: Bauartbedingt kann es vorkommen, dass der Rastnasenschutz der Patchkabels gekürzt werden muss, damit der RJ45 Stecker durch die Kappenöffnung passt.



4. Verschrauben Sie zunächst die Kappe und anschließend die Sicherheitsverschraubung, bis die Dichtungen formschlüssig abgeschlossen sind und so den IP68 Schutz herstellen.

5. Wiederholen Sie die Schritte 2, 3 und 4 für die zweite Seite der Kupplung. Die Kupplung ist nun einsatzbereit.